

TRANSFERABLE POLE GUIDES



The Pole Guides can be transferred to move with the intermediate boom or the upper boom, depending on the job application.

- Pin the pole guides to the intermediate boom when performing work from the platform.
- When handling taller poles, the pole guides can be transferred to the upper boom for additional reach.
- Transfer is completed by moving one pin.

Pole Guides Pinned to Intermediate Boom



One-pin Transfer



Pole Guides Transferred to Upper Boom

